




10
Attach the cut cover pieces (M9363) to both sides of the lid.



11
Slide the lid end support frame onto the hinge.



12
Insert the lid hinge splices (M9362) between each section of the lid end support and lid hinge then slide them tightly together.

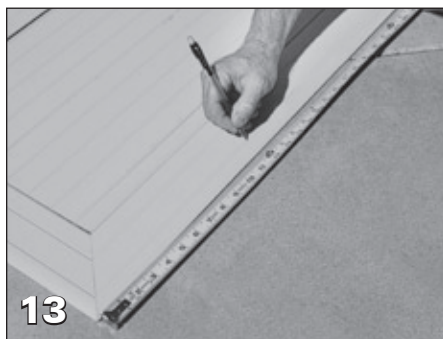


13
With the lid completely assembled, set it over the housing. Now mark and drill holes through the lid hinge approximately every 18 inches. Drill the holes into the deck through the holes in the lid hinge.



14
Remove the lid and hammer the plastic anchors (A1706) into the holes.



15
Countersink the drill holes in the hinge.

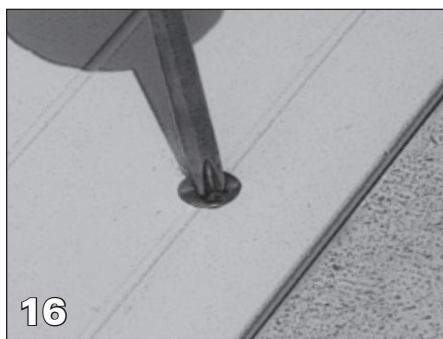

16
Place assembled lid over the housing and screw it into place using the 1 x 1-3/4 stainless steel screws (A2209).